

# Westfalia Viano

Montageanleitung

deutsch

Wichtiges Dokument. Bitte sorgfältig aufbewahren.


Mounting instructions

english

Important document. Please keep in a safe place.




### Roof bed replacement Bearing set (spring elements)

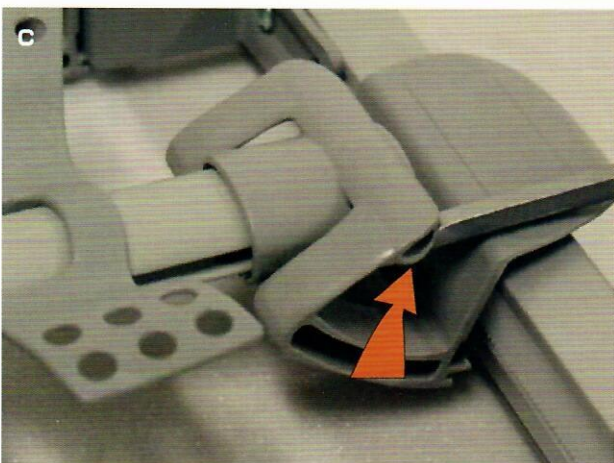- Removal – spring elements, rear half
- Installation – spring elements
- Removal – spring elements, front half
- Removal and installation – coupling



### Scope of delivery
 
#### Roof bed replacement Bearing set (spring elements)

	Designation	Pieces
	Bearings (spring elements)	22 pieces
	Coupling link*	1 piece
	Distanzstück	1 piece
	Instruction manual	1 piece

\* see removal and installation – coupling link

### Tools/aids

Flat-bladed screwdriver  
Hammer

### Recommended:

Step protection (plate, sturdy cardboard, folded blanket)  
Work gloves

### Removal – spring elements (rear half = 5 strips)

Remove mattress (zipper)

- 1 Place on the step protection as shown.
- 2 Apply the screwdriver.  
Use a turning movement to disengage the spring elements (**a-c**).
- 3 Remove the strips toward the top and then place them on the step protection.





### ► Roof bed replacement Bearing set (spring elements)

- Removal – spring elements, rear half
- Installation – spring elements
- Removal – spring elements, front half
- Removal and installation – coupling



#### Dismantling the spring elements




- 4** Use a screwdriver to spread the engaging nose. To do so, apply the screwdriver in flat position. Pull off the element. Use a hammer as an additional aid, if necessary.

#### Aligning the strips

- 6** Align the middle spring elements on the supporting angle. Use the spacer to move the adjacent spring elements into proper spacing position.

#### Installing the spring element


- 5** Push the spring element onto the strip. The engaging nose must engage.

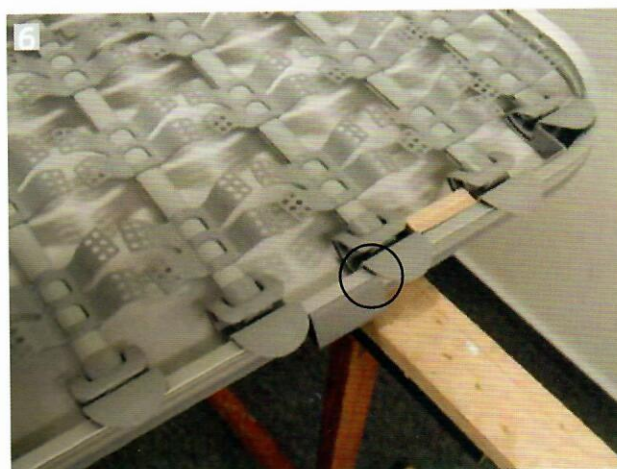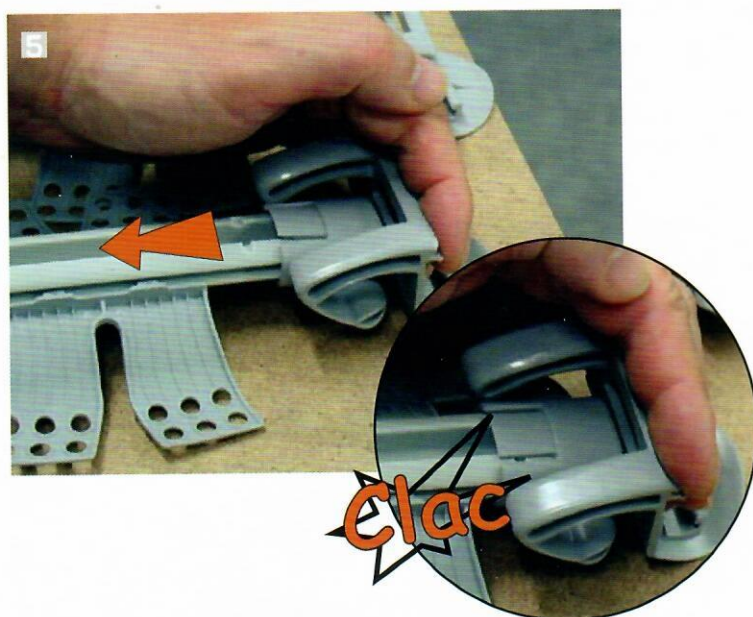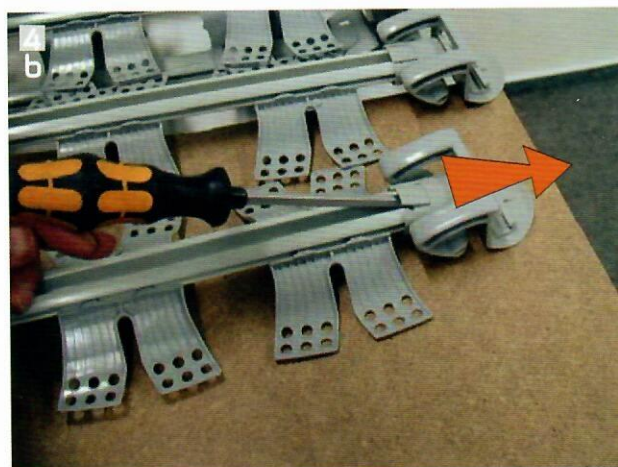






### ► Roof bed replacement Bearing set (spring elements)

- Removal – spring elements, rear half
- Installation – spring elements
- Removal – spring elements, front half
- Removal and installation – coupling

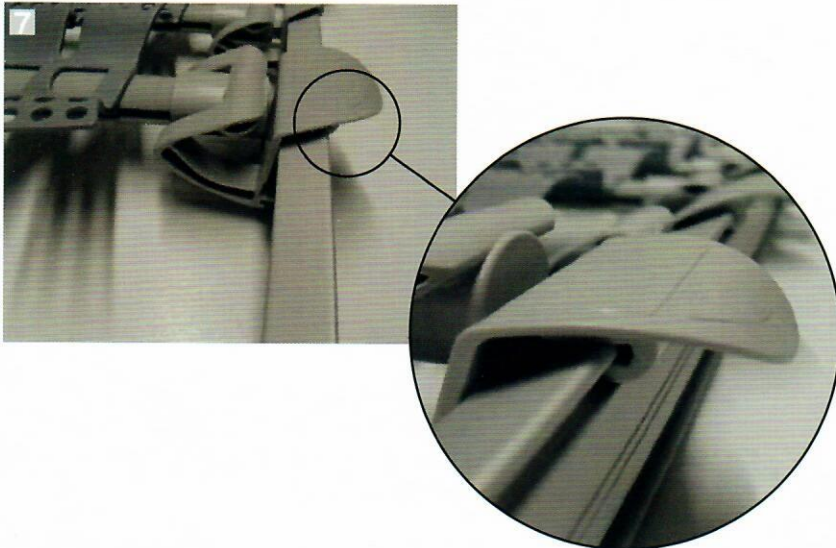




#### Installation – spring elements

- 7 Insert the spring element as shown. The hook on the outer side must reach into the groove.
- 8 Engage the spring element on one side. Repeat this step on the other side (a + b).
- 9 Align the spring elements on the corner angles so that the engaging teeth reach into the recess.

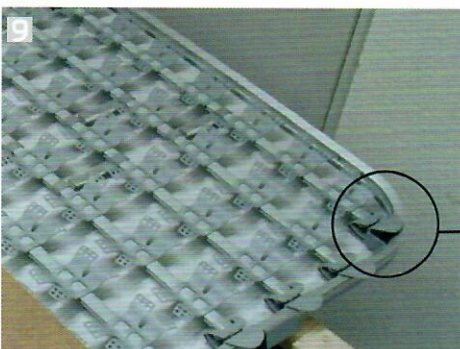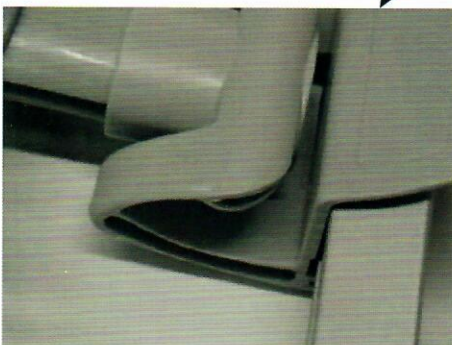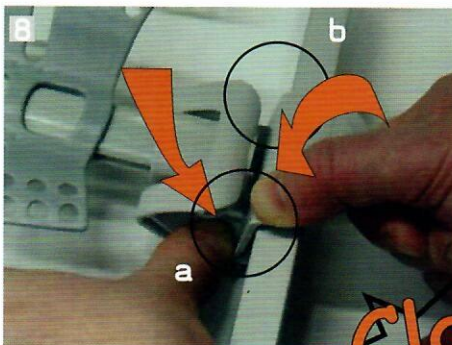

### ► Roof bed replacement Bearing set (spring elements)

- Removal – spring elements, rear half
- Installation – spring elements
- Removal – spring elements, front half
- Removal and installation – coupling

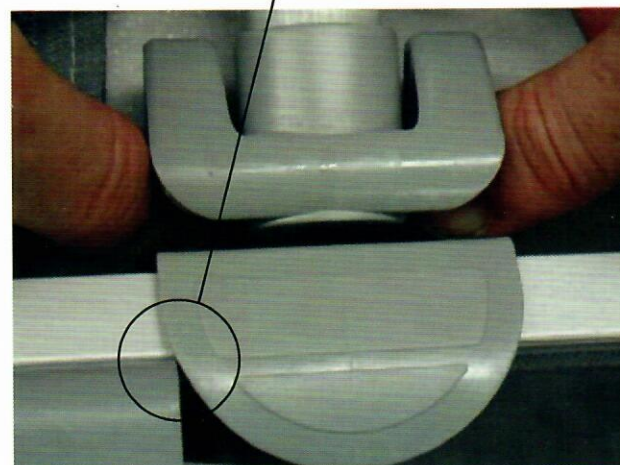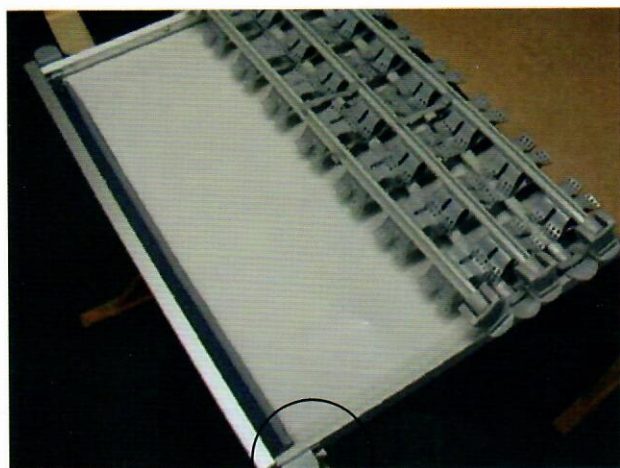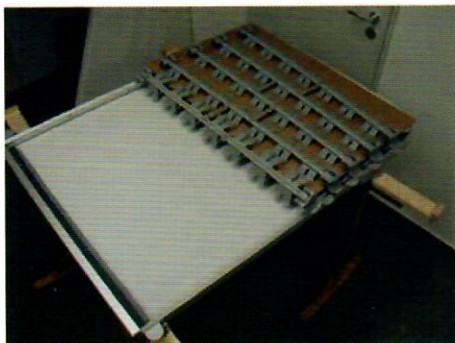

### Removal – spring elements (front half = 5 strips)

Place on the step protection as shown.



Removal as previously described. Perform the installation of the strips individually and successively. Install the furthestmost front strip last.

Before installing the strips, use the spacer to align them. Place the furthestmost front strip on the supporting angle.



### Roof bed replacement Bearing set (spring elements)

- Removal – spring elements, rear half
- Installation – spring elements
- Removal – spring elements, front half
- Removal and installation – coupling

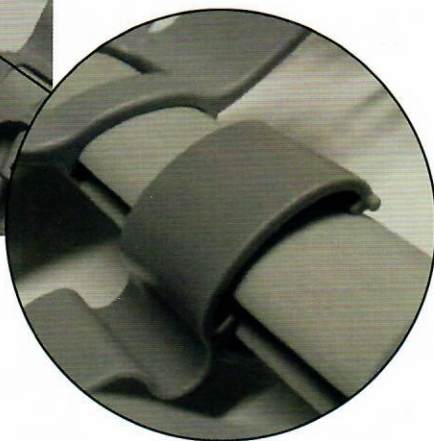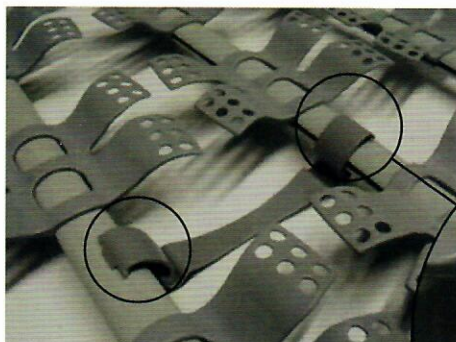

The coupling link must only be replaced if required (damage). Please proceed according to the following description.

#### Removal and installation – coupling link

##### Installation

Insert the coupling links as shown. Insert the spring element as shown. Engage on one side first. To do so, lift up the coupling link slightly in the middle. Repeat this step on the other side.

##### Removal

Apply a screwdriver as shown. Pry out the engaging nose.

Coupling links are safety elements!  
They must be installed carefully.

